 
 

 




Rectangle and Square Installation Instructions

ISOLAT
SUPPLY
REMOVING
PAN


1 What size cut-out do you need?

STANDARD SIZE (MM)	BEADMASTER PRODUCT	REQUIRED CUT-OUT FOR PLASTERBOARD (MM)
Double 	BeadMaster Rectangle	Minimum = 138 x 78 Maximum = 150 x 90 
Single 	BeadMaster Square	Minimum = 78 Maximum = 90 

NOW YOU'RE READY TO INSTALL (PT0)



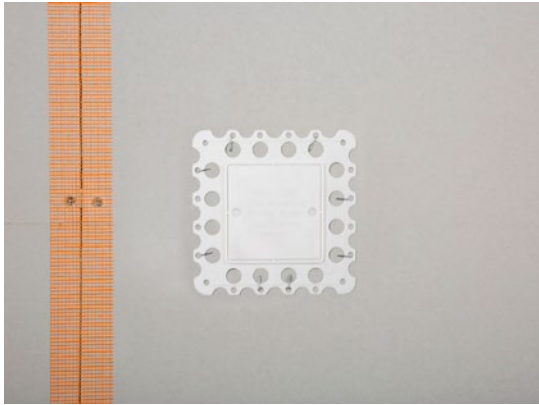2



Push wires centrally into recess and staple BeadMaster cover plate in place.

3



Plaster over the product and skim to a thickness of 2.5mm.

4



Locate and tap lightly with the head of a screwdriver (or similar) on central area which will loosen the plaster on the face of the bead. Continue until the cut line is visible.

5



Remove the central area with a sharp hooked blade knife (or hole saw), being careful to avoid any wires within.

6



Install socket or switch as per manufacturer's instructions. **Your snag-free installation is now complete.**

Get in touch



Please get in touch if you want to learn more about our products or have any other questions.

EMAIL ADDRESS

sales@beadmaster.co.uk

 @beadmasteruk



WWW.BEADMASTER.CO.UK